





61272 Rev 1 12/28/2021

COVER SHEET

1 OF 5

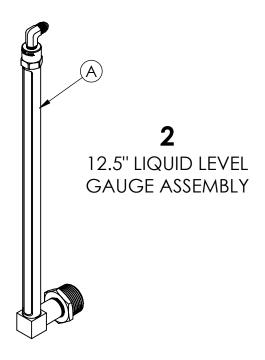




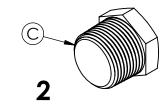

Plug, Hex, 1" NPT 18358

TOOLS NEEDED:

- 2" PIPE WRENCH
- 2" ADJUSTABLE WRENCH
- THREAD SEALANT

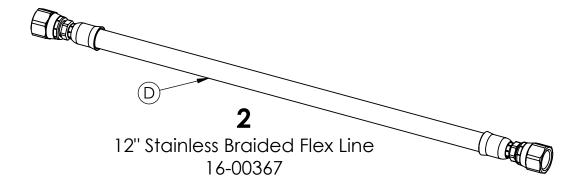




INCLUDED PARTS

2 OF 5


STEP 1

- 1. Make sure both tanks are empty of fluid
- 2. Remove all 6 Viewports from the front of each Upper and Lower tank

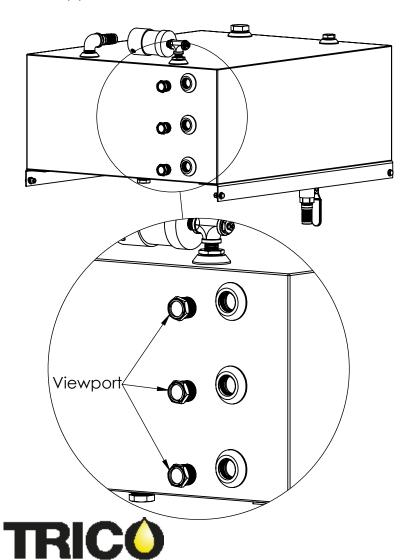


STEP 2

- Using thread sealant, install Hex Plugs (C) into the middle and upper 1" NPT ports on the front of the Upper and Lower tank
- 2. Using thread sealant, install the 12.5" Liquid Level Gauge Assembly (A) into the lower 1" NPT port on the front of the Upper and Lower tank

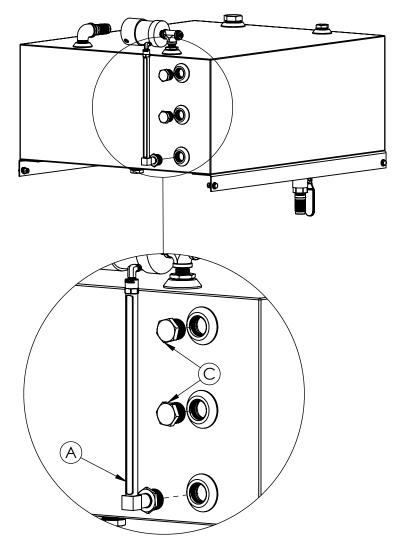


STEP 3


 Remove the bushing and pressure relief valve from the breather tee off the top of each Upper and Lower tank

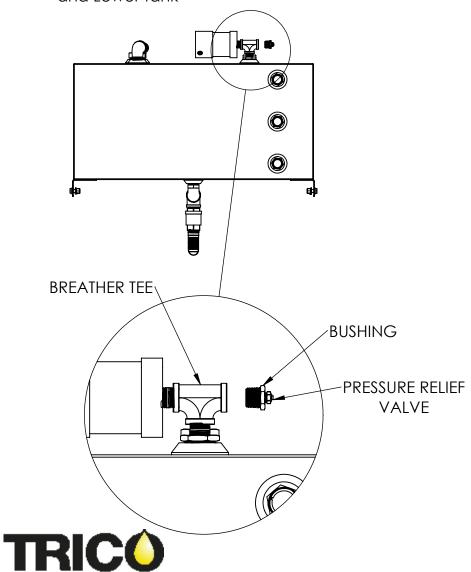


STEP 4

Using thread sealant, install the Breather Tee
Adapter Assembly (B) into the breather tee on the
top of the Upper and Lower tank

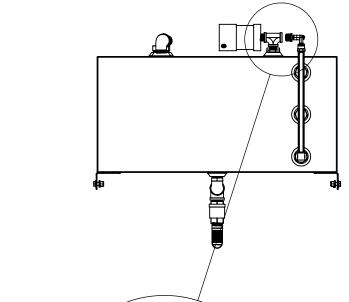

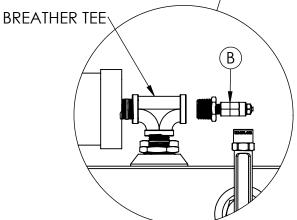

NOTE: ORIENTATION OF THE BREATHER TEE ADAPTER (B) SO THE JIC FITTING POINTS TO THE REAR OF THE TANK SYSTEM

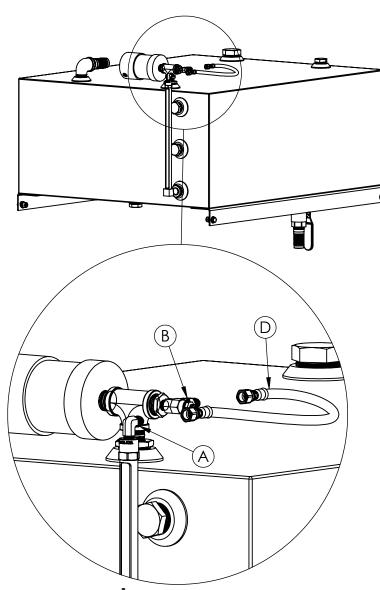

STEP 5

- Connect the JIC fitting on the Breather Tee Adapter Assembly (B) to the JIC fitting on the 12.5" Liquid Level Gauge Assembly (A) using the 12" Stainless Braided Flex Line (D)
- 2. Repeat Steps 1-5 for the Lower tank

