


## Streamliner M Troubleshoot Guide

If your Streamliner M unit does not dispense grease when turned on, please follow these steps. The most common cause of this is an air pocket which can be easily resolved.

1. Turn the lubricator off. Disassemble the top housing and the grease pouch and gently depress the check valve a few times with a thin Allen wrench or other similar tool as shown in the image below.



2. Purge the grease pouch until grease comes out of the tip of the grease pouch.

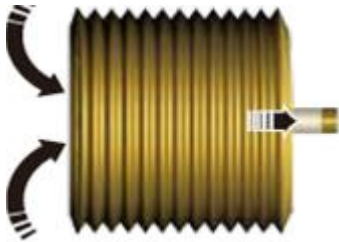

3. Place the grease pouch over the lubricator's check valve and carefully screw the grease pouch in.



4. Refit the top housing on the lubricator. Turn the unit on and run test mode. Check to see if grease is dispensing.

If the problem continues after following the steps above, please contact a Trico representative at 262-691-9336.